

## Notice on ThinkSystem SN550 V2 PSU support



### Attention:

**Before installing the ThinkSystem SN550 V2, check the FRU part number of the power supply units (PSU) in the Lenovo Flex System Enterprise Chassis.**

If any of the following FRU part numbers are used in the chassis, replace the power supply unit(s) with the Flex System Enterprise Chassis 2500W Power Module.

- 01PF551
- 00MX939
- 00YJ931
- 94Y8303
- 69Y5890

The FRU part numbers of the installed PSUs can be identified using the Lenovo Chassis Management Module 2 (CMM) web interface or command-line interface (CLI).





- Web interface
  1. Launch the CMM web interface.
  2. Select the **System Status** tab.
  3. Click the PSU on the chassis graphic view.
  4. Select the **Hardware** tab below the chassis graphic view.
  5. Select **Power Module** for the PSU FRU part number.
- Command-line interface (CLI)
  1. Access the CMM CLI interface via SSH.
  2. Use the command `info -T power[x]`, where x is the PSU slot number. For example `info -T power[1]`
  3. Read the FRU no. for the PSU FRU part number.

### Attention:

**To avoid warning message, please ensure the power supply upgrade is completed prior to inserting the ThinkSystem SN550 V2 into the Lenovo Flex System Enterprise Chassis.**

Refer to the links next page for more information.

Refer to the links below for more information:

Link	QR Code
<p><b>Download the flyer</b></p> <p><a href="https://thinksystem.lenovofiles.com/help/topic/SN550V2/pdf_files.html">https://thinksystem.lenovofiles.com/help/topic/SN550V2/pdf_files.html</a></p>	
<p><b>Lenovo Flex System Enterprise Chassis ServerProven Program</b></p> <p><a href="https://static.lenovo.com/us/en/serverproven/flex/8721_7893.shtml">https://static.lenovo.com/us/en/serverproven/flex/8721_7893.shtml</a></p>	
<p><b>Removing a power supply from the Lenovo Flex System Enterprise Chassis</b></p> <p><a href="https://flexsystem.lenovofiles.com/help/topic/com.lenovo.acc.8721.doc/removing_the_power_module.html">https://flexsystem.lenovofiles.com/help/topic/com.lenovo.acc.8721.doc/removing_the_power_module.html</a></p> <p><b>Attention: While replacing power supply units, make sure to complete replacement of one unit before starting replacement of another unit.</b></p>	
<p><b>Installing a power supply from the Lenovo Flex System Enterprise Chassis</b></p> <p><a href="https://flexsystem.lenovofiles.com/help/topic/com.lenovo.acc.8721.doc/replacing_the_power_module.html">https://flexsystem.lenovofiles.com/help/topic/com.lenovo.acc.8721.doc/replacing_the_power_module.html</a></p>	
<p><b>Limited maximal number of ThinkSystem SN550 V2 in the same Lenovo Flex System Enterprise Chassis</b></p> <p><a href="https://thinksystem.lenovofiles.com/help/topic/SN550V2/limited_maximal_number_compute_node.html">https://thinksystem.lenovofiles.com/help/topic/SN550V2/limited_maximal_number_compute_node.html</a></p>	
<p><b>ThinkSystem SN550 V2 product guide</b></p> <p><a href="https://lenovopress.com/lp1397-thinksystem-sn550-v2-server">https://lenovopress.com/lp1397-thinksystem-sn550-v2-server</a></p>	



---

**Second Edition (June 2021)**

**© Copyright 2021.**

**LENOVO and THINKSYSTEM are trademarks of Lenovo. All other trademarks are the property of their respective owners.**

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration (GSA) contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Printed in China

(1P) P/N: SP47A76674

